

loveⁿcare
lovencare.com.au

Contact Us

Head Office:

Love N Care Pty Ltd.
297-299 Canterbury Rd, Revesby
NSW 2212 Australia
Contact No: 02 9774 4655
Fax: 02 9774 4633
Email: info@lovencare.com.au
Website: www.lovencare.com.au




 <https://www.facebook.com/lovencare1>

 <https://www.instagram.com/lovencare>

 100 % AUSTRALIAN OWNED SINCE 1984

loveⁿcare™

HK 996

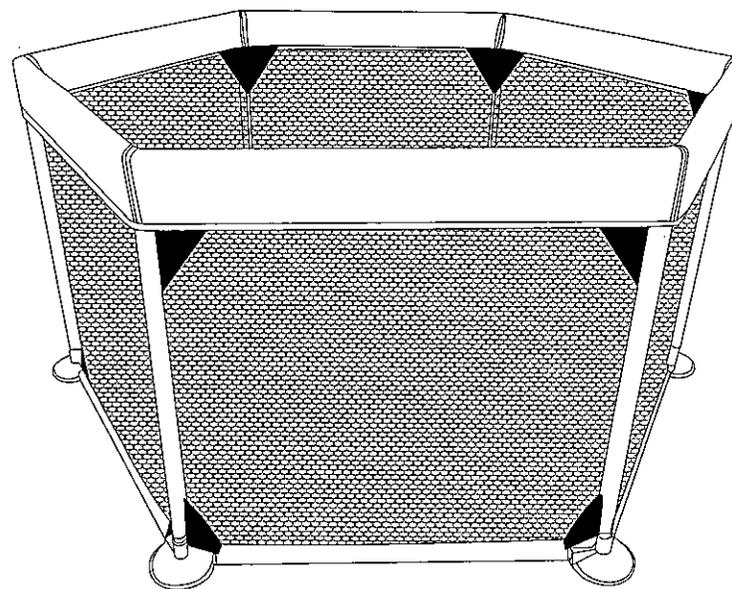

PLAY YARD

**IMPORTANT:
RETAIN FOR FUTURE REFERENCE**

! WARNING !

Before assembling this Play yard, read and understand the instructions. Incorrect assembly may make the play yard unsafe. (Keep the instructions safe for future reference.)

NEVER leave child unattended.

WARNING - Ensure that the playpen is fully erected and all the locking mechanisms engaged before placing your child in this playpen.

Adult assembly required, always keep fingers clear of moving parts.

Keep small parts away from children.

This product has been designed and manufactured to comply with safety standard EN 12227:2010.

DO NOT leave anything in the activity den which could provide a foothold or create a danger of suffocation or strangulation.


All assembly fittings should always be tightened properly.

DO NOT use the activity den if any part is broken, torn or missing and use only spare parts approved by the manufacturer. Accessories which are not approved by the manufacturer shall not be used

- keep children away while assembling/disassembling the cot.
- do not leave anything on the folding cot (such as toys) that provide a foothold.
- do not use the folding cot near naked heat sources, bar heaters, open fires or exposed flames.
- keep the folding cot clear of trailing cables and hanging cords.
- keep medication and small items that a child could choke on, away from the cot.
- Do not use the play yard without the base.
- Ensure that the play yard is fully erected and all the locking mechanisms engaged before placing your child in this play yard. All assembly fittings should always be tightened properly and that fittings should be checked regularly and retightened as necessary.
- Before each use make sure that the Play yard is correctly assembled and that the locking devices are fully engaged
- Only use accessories that are recommended by the manufacturer.
- Do not use this play yard if any part is broken, torn or missing.
- the play mat is specifically designed to fit your play yard.
- Ensure that the child is unable to climb out of the play yard. To prevent falls or play yard collapse discontinue use of the folding cot before the child can climb.
- Never leave your child unattended; always keep an eye on your child.
- After unfolding, make sure that the play yard is secure and that all sides are audibly engaged or locked.
- Do not dismantle the play yard when the baby is in the playpen.
- The play yard Top rails must be completely locked, should be fully erected before use.
- Avoid overloading the play yard . The play yard is intended for use by only one child and with a weighs less than 15 kg. The play yard is suitable for use with children up to 24 months of age. This product has been designed for use with children from 6 to 24 months or 89cm tall, whichever comes first?
- to prevent injury from falls that when the child is able to climb out of the play pen, the play yard shall no longer be used for that child.
- Do not use more than one mattress in the play yard.
- Only use the mattress sold with this cot, do not add a second mattress on this one, suffocation hazards would occur if second mattress is added.
- This is a playpen enclosure for your child not a sleeping device.
- Always use this playpen on a flat level surface - A blanket or rug can be placed under the unit should it be positioned on a hard surface.
- When used outside please be aware of nature's elements; protect children from the sun and cold conditions that may present

lovehcare™

Congratulations on your purchase of the Play Yard
This product has been designed and developed with safety, comfort and functionality in mind. Please take the time to read this manual carefully before using this product and keep it in a safe place for future reference.

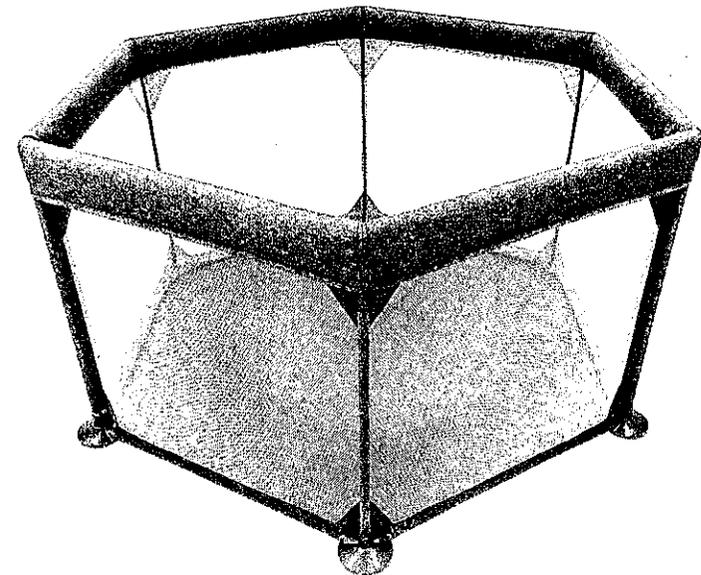


Due to variations in the style and design of our products, the photographs and illustrations shown in this instruction manual are used for display purposes only and may differ to the actual item.

PARTS


WHAT YOU SHOULD FIND INSIDE YOUR BOX

Please check the contents of the box against the list below.
If anything is missing, please contact Love N Care on
1300 732 599.

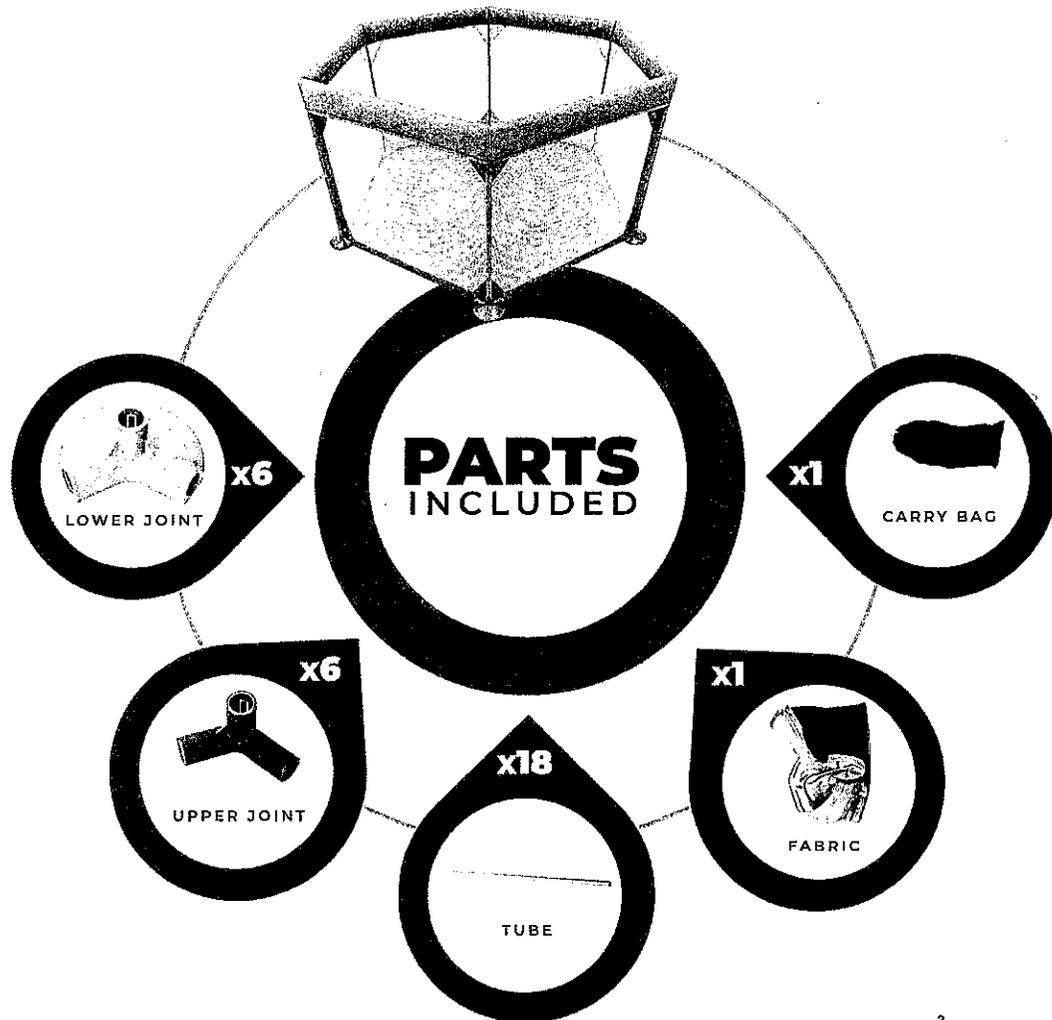


3


ASSEMBLY INSTRUCTIONS

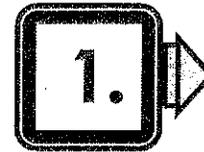


Lay the fabric out flat on the floor.

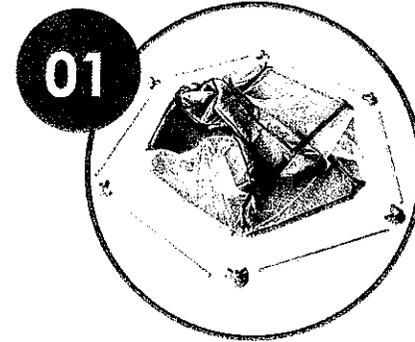

Start to assemble the base by inserting 6x Tubes through the sleeves on the bottom of the fabric.

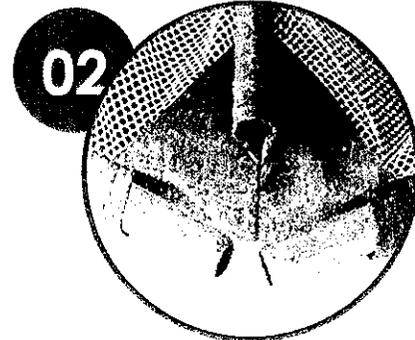

Connect the bottom tubes by inserting the ends of the tubes into 6x lower joints.

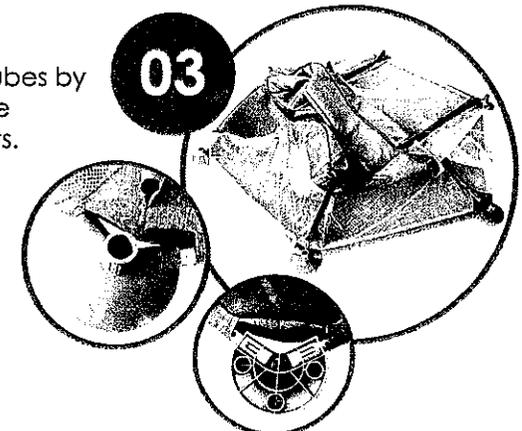



Images are for illustration purposes only. The design might differ from the actual item.⁴

ASSEMBLY INSTRUCTIONS



CONTINUED



Start to insert 6x tubes vertically through the sleeves on the sides of the fabric. Insert the bottom of the tube into the lower joint. Repeat for all slots.

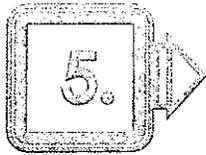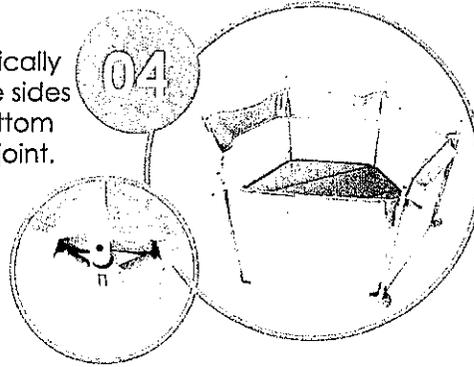


Place the upper joint on the vertically assembled tubes. Repeat this for the 6 vertically assembled tubes.

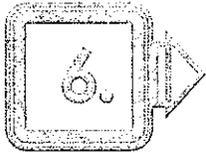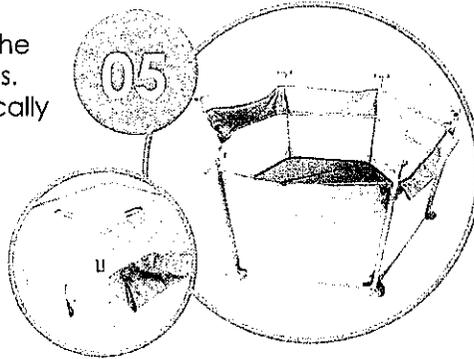


Connect the tubes on the top level by inserting the ends of the tubes into 6x upper joints. Repeat for the 6 edges.

"Assembling Remind: Here is the last tube for assembling, please fasten it with velcro if you feel it loose."


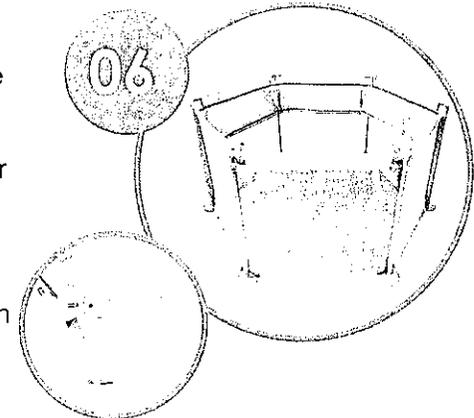


ASSEMBLY INSTRUCTIONS

CONTINUED


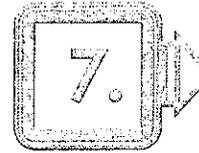


Place upper fabric over the vertically assembled tubes. This should wrap around the top assembled tube.

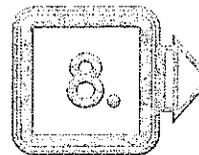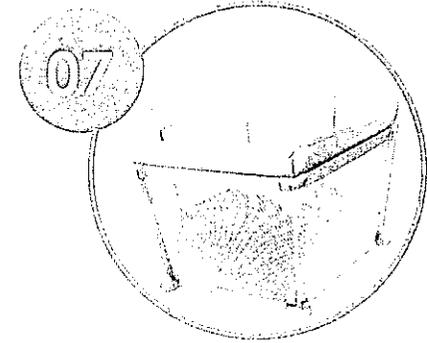


Turn over the upper fabric and cover the top tubes.

Fasten the velcro and cover the fabric.

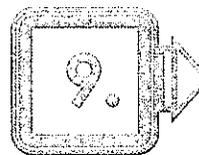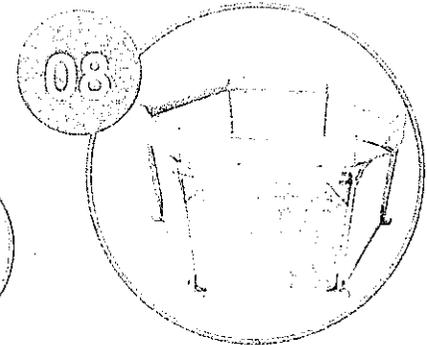

The Assembled Playpen.

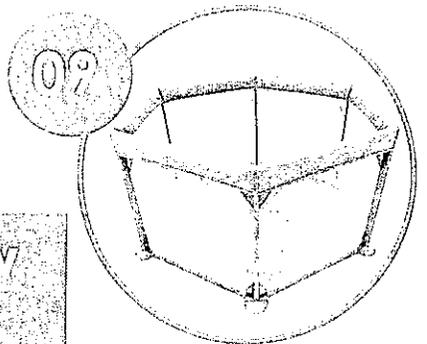

TO DISASSEMBLE FOLLOW STEPS 8-1 IN REVERSE

Care and Maintenance

Cleaning

This product has been designed and developed with safety, comfort and functionality in mind. Please take the time to read this manual carefully before using this product and keep it in a safe place for future reference.

To ensure the long-lasting use of your PLAY YARD, wipe down with a damp cloth and use a mild soap solution if necessary. Do not use abrasive cleaners. Always store product in a clean dry place.

Maintenance

Always check parts regularly for tightness of joints and other fasteners – tighten or replace if required. To maintain the safety of your play yard, seek prompt repairs for bent, torn, worn or broken parts. Use only those parts and accessories approved by Love N Care.

If you have any difficulties in assembling the Play Yard, please contact Love N Care on 1300 732 599.


Warranty Against Defects

All Love N Care products are guaranteed for twelve months from the date of purchase. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law.

You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. This covers against faults which develop through faulty materials and workmanship.

Misuse, accidental damages, normal wear and tear or neglect are not covered. If a fault becomes apparent, please return the item to the store of purchase with your receipt. You must inform the store what the defect is. We will then arrange for its repair or it will be assessed for replacement as expediently as possible. The benefits of this warranty are in addition to other right and remedies under the law in relation to the goods or services to which this warranty relates. If you are unable to return the item to the store of purchase, you can contact Love N Care on free call 1300 732 599.

Where you send the product directly to the manufacturer then you may be liable for the costs of transportation to and from Love N Care. Love N Care will meet the reasonable expenses incurred by a consumer in a making a warranty claim. You can claim expenses incurred in making a claim by contacting our customer service team on 1300 732 599 or by email at info@lovencare.com.au

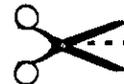

12 MONTH WARRANTY

LOVE N CARE PLAY YARD HK 996

Please fill in this section to validate your warranty and send to: **297 Canterbury Rd Revesby NSW 2212**

Name: _____ Store Purchased: _____

Address: _____ Date Purchased: _____

Product Name/No. _____