

love^hcare™



TWIN
TWIN GO

Instruction Manual BP 9760

PLEASE KEEP INSTRUCTIONS FOR FUTURE REFERENCE

loveⁿcare™

Congratulations on your new quality Love N Care product from our exclusive range of baby products. This exceptional design combines the most unique features that any baby product offers.

We are confident that you will appreciate its many highlights, including its reliability and durability. Your new product has been manufactured to comply with the Highest Quality Standards and comes with a 12-month warranty.

As you will soon learn there are many more great features about your new Love N Care product.





Safety guidelines and instructions must always be followed before making use of this product, please retain these instructions for future reference.

This product complies with product standard AS/NZS 2088:2009

WARNING

WARNING: TO AVOID INJURY OR DEATH:

FOLLOW THE MANUFACTURER'S INSTRUCTIONS.

PUT ON ALL THE BRAKES WHENEVER YOU PARK THE STROLLER.

ALWAYS APPLY THE BRAKES WHENEVER THE STROLLER IS STATIONARY.

DO NOT LEAVE CHILDREN UNATTENDED.

SECURE THE CHILD IN THE HARNESS AT ALL TIMES.

DO NOT CARRY EXTRA CHILDREN OR BAGS ON THIS STROLLER.

MAKE SURE CHILDREN ARE CLEAR OF ANY MOVING PARTS IF YOU ADJUST THE STROLLER, OTHERWISE THEY MAY BE INJURED.

USE THE HARNESS AT ALL TIMES.

WHEN NOT IN USE DISCONNECT SHOULDER STRAPS FROM THE WAIST STRAP AND/OR BUCKLE.

The harness can form loops which may be a strangulation hazard. Never leave a harness connected when not fitted to a child in the stroller.

To avoid serious injury always use the harness provided to secure the child.
(Adjust the straps to suit the body size of your child)

THE MAXIMUM WEIGHT FOR THE SEAT UNIT IS 18KG (EACH)

THE MAXIMUM WEIGHT FOR THE CARRY COT IS 9KG.

THE MAXIMUM WEIGHT FOR THE BASKET IS 6KG

THE MAXIMUM TOTAL WEIGHT FOR THE STROLLER IS 42KG

It is unsafe to use accessories other than those supplied or approved by Love N Care.

Care should be taken if the stroller is to be used on stairs or escalators.

This stroller should not be used near an open fire or an exposed flame.

Care should be taken whilst folding and unfolding stroller to prevent fingers being trapped.

Ensure your child's fingers, hands and all other body parts are clear from any moving part when adjusting the seat or handle on your stroller.

Do not use this seat with any other stroller.

Do not use the bassinet (if purchased) once the child can sit up.

WHATS INSIDE THE BOX



WHAT YOU SHOULD HAVE INSIDE.

1. TWINGO FRAME
2. 2-FRONT WHEELS
3. 2-REAR WHEELS
4. 2-BUMPER BARS
5. BASKET
6. 2-SEAT UNITS
7. BOOT COVERS FOR SEAT UNIT(SOLD SEPERATELY)
8. CARRY COT (SOLD SEPERATELY)
9. BOOT COVER FOR CARRY COT (SOLD WITH CARRY COT)
10. MOSQUITO NET(SOLD SEPERATELY)
11. TETHER STRAP

HOW TO ASSEMBLE

UNFOLD THE FRAME



LAY THE FRAME ON THE FLOOR
UNLOCK THE FOLDING CATCH ON THE
RIGHT AND LEFT HAND SIDE



REMOVE THE LATCH FROM THE STUD
ON BOTH SIDES. (PUSH THE LATCH
TOWARDS THE STUD TO RELEASE IT)



ONCE THE LATCH IS RELEASED
PULL THE HANDLE UP
UNTIL IT LOCKS INTO PLACE.



ENSURE ALL THREE ENDS ARE
LOCKED INTO PLACE.
TUG ON THEM TO ENSURE THEY
ARE SECURED.



THE ASSEMBLED FRAME SHOULD
LOOK LIKE THIS

HOW TO ASSEMBLE

ATTACHING THE FRONT WHEELS



INSERT THE FRONT WHEEL PART NO.2 INTO THE FRONT HOUSING AS SHOWN UNTIL IT CLICKS INTO PLACE. REPEAT ON BOTH SIDES.

PULL ON THE FRONT WHEELS TO ENSURE THEY ARE ASSEMBLED CORRECTLY.



ATTACHING THE REAR WHEELS



PLACE THE STROLLER ON ITS SIDE AND INSERT PART NO.3. REAR WHEEL INTO THE REAR HOUSING

PUSH DOWN THE CENTRE BUTTON WHEN THE REAR WHEEL IS IN THE AXEL. MAKE SURE THAT THE WHEELS ARE FIRMLY LOCKED.



THE ASSEMBLED REAR WHEEL SHOULD HAVE THE MIDDLE BUTTON FLUSH WITH THE FRAME OF THE WHEEL.

THE FRAME WITH THE WHEELS ASSEMBLED SHOULD LOOK LIKE THIS



HOW TO ASSEMBLE

HOW TO ASSEMBLE THE BASKET



SNAP THE CLIPS TOGETHER



CURL THE MATERIAL AROUND THE FRAME AND SNAP THE CLIPS TOGETHER

ENSURE ALL THE BUTTONS ARE CLIPPED IN.

THE ASSEMBLED BASKET SHOULD LOOK LIKE THIS.

TO REMOVE THE BASKET JUST UNCLIP ALL THE BUTTONS.




ATTACHING THE SEAT TO THE FRAME



IN ORDER TO ATTACH THE SEAT UNIT PLACE THE SEAT ON THE FRAME. MAKE SURE EACH OF THE SIDES OF THE SEAT UNIT ARE PUSHED DOWN INTO THE OPENINGS.

IN ORDER TO REMOVE THE SEAT UNIT PUSH THE RED BUTTON ON BOTH SIDES AND LIFT THE SEAT OFF THE FRAME.

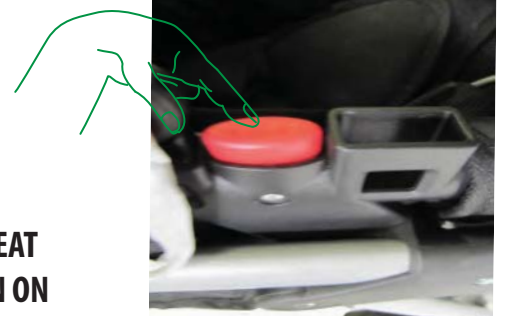

FRONT FACING POSITION



THE STROLLER CAN BE PLACED IN EITHER FRONT FACING OR REAR FACING POSITION OR BOTH AT THE SAME TIME.



REAR FACING POSITION

HOW TO ASSEMBLE

HOW TO ASSEMBLE/REMOVE THE BUMPER BAR



TO PLACE THE BUMPER BAR ON THE SEAT UNIT YOU MUST PLACE THE ENDS OF THE BAR IN THE HOLDING HOLES PROVIDED ON EACH SIDE OF THE UNIT UNTIL IT LOCKS INTO PLACE



IN ORDER TO REMOVE THE BAR FROM THE SEAT UNIT PRESS THE 2 PLASTIC CLOPS ON EACH SIDE THEN LIFT THE BAR OUT.

PLEASE NOTE THE BUMPER BAR SHOULD NOT BE USED TO CARRY THE SEAT UNIT WITH THE CHILD INSIDE

HOW TO ASSEMBLE THE BOOTCOVER

(SOLD SEPERATELY)

SNAP THE CLIPS TOGETHER



TO ASSEMBLE THE BOOTCOVER ON THE SEAT UNIT PLACE IT OVER THE FOOTREST AND SNAP THE CLIPS ON THE BASE OF THE SEAT WITH THE ONES ON THE BOOTCOVER.



THEN CURL THE TOP OF THE BOOTCOVER OVER THE BUMPER BAR AND SNAP THE CLIPS TOGETHER

THE ASSEMBLED BOOTCOVER



HOW TO ASSEMBLE

HOW TO ASSEMBLE THE CARRY COT (SOLD SEPERATELY)

SET UP THE BASE



STEEL BRACES

CATCHMENT



ONCE UNPACKED YOU WILL HAVE TO ENSURE THAT THE BASE AND THE SIDES OF THE CARRY ARE ASSEMBLED.

PUSH BOTH OF THE STEEL BRACES INTO THE CATCHMENT.

MAKE SURE THE BRACES ARE PROPERLY LOCKED INTO PLACE BEFORE FIXING THE COVER



STEEL BRACES IN CATCHMENT

FITTING THE COVER



FASTEN THE VELCRO

TO PLACE THE COVER OF THE CARRY COT DRAW ONE END OF THE COVER OVER THE BOTTOM END, THEN STRETCH THE COVER OVER THE OTHER END AND OVER THE SIDES.

FASTEN THE COVER TO THE SIDES BY CLOSING THE VELCRO. THEN ADD THE MATTRESS.



FASTENED COVER WITH MATTRESS

ATTACHING THE HOOD



TO PLACE THE HOOD ON THE SEAT UNIT YOU MUST PLACE THE ENDS OF THE BAR IN THE HOLDING HOLES PROVIDED ON EACH SIDE OF THE UNIT UNTIL IT LOCKS INTO PLACE



ASSEMBLED HOOD

HOW TO ASSEMBLE

HOW TO ASSEMBLE THE CARRY COT (SOLD SEPERATELY)

HOW TO ATTACH THE BOOTCOVER



FASTEN TO PRESS STUD



USE THE VELCRO

TO ATTACH THE BOOTCOVER OVER THE BOTTOM END OF THE CARRY COT COVER THE BOTTOM END AND PULL THE LEG COVER TOWARDS THE HEAD.

FASTEN THE END OF THE COVER TO THE OUTSIDE OF THE COVER WITH THE PRESS STUD ON THE HOOD.

ENSURE THE VELCRO IS USED TO ENSURE THE BOOT COVER IS ATTACHED SECURELY.




PLEASE ENSURE THAT THE BASSINET IS ASSEMBLED WITH THE BABIES HEAD TOWARDS THE HANDLE

ATTACHING THE CARRY COT TO THE FRAME



IN ORDER TO ATTACH THE CARRY COT PLACE IT ON THE FRAME. MAKE SURE EACH OF THE SIDES OF THE CARRY COT ARE PUSHED DOWN INTO THE OPENINGS.

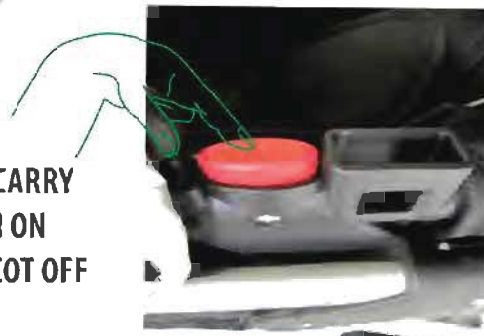

IN ORDER TO REMOVE THE CARRY COT PUSH THE RED BUTTON ON BOTH SIDES AND LIFT THE COT OFF THE FRAME.



CARRY COT ASSEMBLED

⚠ WARNING

DO NOT USE THIS CARRY COT ONCE THE CHILD CAN SIT UP UNAIDED. TO BE USED WITH THE TWINGO STROLLER. THE MAXIMUM WEIGHT OF THE CHILD TO BE USED FOR CARRY COT IS 9KG

HOW TO ASSEMBLE

HOW TO ATTACH THE RAINCOVER (SOLD SEPERATELY)

THE RAINCOVER CAN BE USED WHILST ATTACHED TO THE FRAME. PLACE IT OVER THE SEAT UNIT. ENSURE THAT THE BREATHEABLE HOLES ARE AT FRONT OF THE UNIT. CONNECT THE ENDS WITH THE VELCRO.



ATTACHING THE TETHER STRAP

TO ATTACH THE TETHER STRAP LOOP IT OVER THE HANDLE. OPEN THE END OF THE TETHER STRAP HANGING OVER THE HANDLE AND INSERT THE OPPOSITE END THROUGH THE OPENING CREATED. PULL UNTIL THE TETHER STRAP IS TIGHTENED AROUND THE HANDLE.

A TETHER STRAP IS TO BE FITTED TO THIS STROLLER. PLACE THE LOOP OVER THE DESIRED WRIST WHEN USING THE STROLLER. IF YOU NEED TO CHANGE THE WRIST, LOOSEN THE TETHER STRAP AND SLIDE TO THE DESIRED SIDE OF THE HANDLE.



ASSEMBLED TETHER STRAP

HOW TO USE

HOW TO LOCK/REMOVE FRONT/REAR WHEELS

LOCK/UNLOCK FRONT WHEELS



TO **LOCK** THE FRONT SWIVEL WHEELS PUSH DOWN WITH YOUR FOOT ON THE FRONT SWIVEL.

TO **UNLOCK** (SWIVEL MODE) LIFT THE SWIVEL LOCK UP.



WHEN THE FRONT WHEEL IS LOCKED THE SWIVEL WOULD BE CAUGHT ON THE FRAME OF THE WHEEL.

SWIVEL MODE: SHOULD BE USED FOR EVERYDAY USE OR ON SMOOTH SURFACES AND TIGHT CORNERING.


LOCKED MODE: SHOULD BE USED ON UNEVEN SURFACES OR WHEN WALKING QUICKLY.

REMOVE FRONT WHEELS

TO REMOVE THE FRONT WHEEL PRESS THE BUTTON ON THE FRONT TO RELEASE THE WHEEL OUT OF THE AXEL.



REMOVE REAR WHEELS

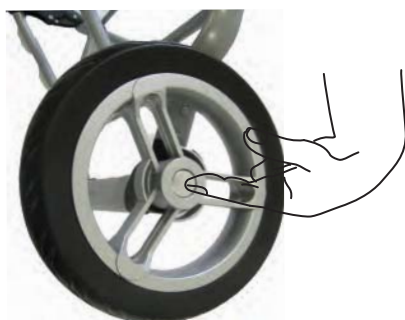

TO REMOVE THE REAR WHEEL PRESS THE BUTTON ON THE CENTRE TO RELEASE THE WHEEL OUT OF THE AXEL.

HOW TO USE


HOW TO USE THE BRAKES



APPLY THE BRAKES

IN ORDER TO APPLY THE BRAKES PRESS THE LEVER ON THE REAR OF THE STROLLER DOWN.

IN ORDER TO RELEASE THE BRAKES KICK (PUSH UP) THE LEVER.

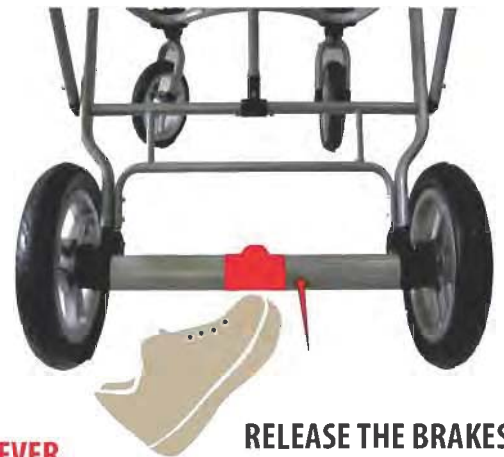

RELEASE THE BRAKES



PUT ON ALL BRAKES WHENEVER YOU PARK THE STROLLER

HOW TO USE THE HOOD



CLOSED HOOD


TO OPEN THE HOOD: PULL THE HOOD OUTWARDS

TO CLOSE THE HOOD : PUSH THE HOOD INWARDS



OPEN HOOD

HOW TO ADJUST THE FOOTREST

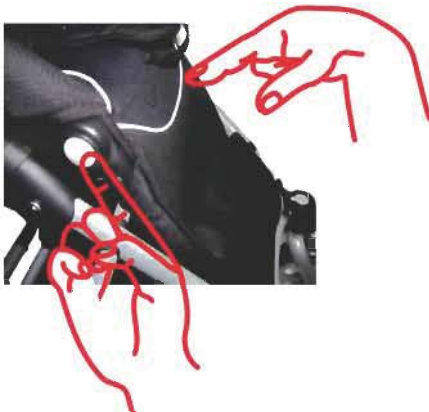

TO ADJUST THE FOOTREST, PUSH THE BUTTONS ON THE OUTER SIDE OF THE SEAT UNIT. ONCE THE BUTTONS ARE DEPRESSED YOU CAN EITHER RAISE OR LOWER THE FOOTREST TO THE DESIRED POSITION.



HOW TO USE

HOW TO ADJUST THE BACKREST



TO RAISE: PUSH UP THE ACTUAL BACK REST WITH YOUR HANDS AND PULL THE MATERIAL DOWN. THE SEAT WILL THEN RISE.



TO LOWER: PULL THE REAR LOOP DOWN. THE SEAT WOULD THEN RECLINE.



RECLINED SEAT UNIT

SHOULD BE USED FOR NEWBORNS AND SLEEPING TODDLERS



UPRIGHT SEAT UNIT

SHOULD BE USED FOR TODDLERS

HOW TO USE

HOW TO USE THE SAFETY HARNESS



THIS STROLLER HAS BEEN DESIGNED WITH A 5-POINT HARNESS FOR THE SAFETY OF YOUR CHILD. CAREFULLY PLACE YOUR CHILD INTO THE SEAT AND BRING THE SAFETY HARNESS AROUND THE CHILDS WAIST AND OVER THE CHILDS SHOULDERS. PLACE THE CROTCH STRAP BETWEEN YOUR CHILDS LEGS. TIGHTEN THE HARNESS TO BE SNUG AROUND THE CHILDS WAIST AND OVER ITS SHOULDERS. ATTACH EACH OF THE SHOULDER STRAPS TO THE CROTCH STRAP BUCKLE WITH EACH END. REPEAT THIS FOR BOTH SHOULDER STRAPS. ONCE EACH SHOULDER STRAP IS ATTACHED ON THE WAIST BUCKLE INSERT THE WAIST STRAP END TO THE BUCKLE. REPEAT FOR BOTH SIDES. THEY SHOULD SNAP IN. (PULL ON THEM TO TEST) TO RELEASE THE HARNESS PRESS THE CENTRE BUTTON.

ADJUST THE STRAP TO BE SNUG FOR THE SHOULDER STRAPS

⚠ WARNING

WHEN NOT IN USE DISCONNECT SHOULDER STRAPS FROM THE WAIST STRAP AND/OR BUCKLE

⚠ WARNING

USE THIS HARNESS AT ALL TIMES

YOUR CHILD SHOULD BE SECURELY HARNESSSED AT ALL TIMES AND SHOULD NEVER BE LEFT UNATTENDED

HOW TO USE

HOW TO FOLD THE STROLLER

IN ORDER TO FOLD THE STROLLER YOU MUST

1. PULL UP THE BLACK HOLDER IN THE CENTRE UNTIL IT STAYS IN POSITION.
2. PULL UP THE SECOND CATCHES ON BOTH SIDES UNTIL THEY MOVE UP.
3. PUSH THE HANDLE DOWN TOWARDS THE REAR WHEELS UNTIL THE STROLLER IS FOLDED.



PULL UP CENTRE HOLDER




PULL UP THE SIDE CATCHES



PULL THE HANDLE TOWARDS THE REAR WHEEL



FOLDED STROLLER

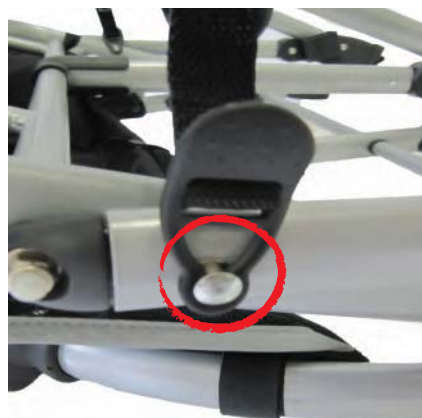

ONCE THE STROLLER IS FOLDED PLACE THE STRAPS FROM EACH SIDE OF THE STROLLER ON TO THE SIDES RIVETS. THIS IS TO ENSURE THE STROLLER DOES NOT OPEN WHILST TRAVELLING. TO OPEN PULL THE CATCH DOWN TO RELEASE.

WARRANTY AGAINST DEFECTS.

All Love n care products are guaranteed for twelve months from the date of purchase.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

This covers against faults which develop through faulty materials and workmanship. Misuse, accidental damages, normal wear and tear or neglect are not covered.

If a fault becomes apparent, please return the item to the store of purchase with your receipt. You must inform the store what the defect is. We will then arrange for its repair or it will be assessed for replacement as expediently as possible. The benefits of this warranty are in addition to other right and remedies under the law in relation to the goods or services to which this warranty relates.

If you are unable to return the item to the store of purchase, you can contact Love N Care on free call 1300 732 599. We will then organise for either somebody to inspect the item or arrange for a courier to pick it up and return it back to you.

This product has been designed, manufactured and tested to comply with Australian Standard

For more information, please contact us:



Love N Care Pty Ltd.

Email: info@lovencare.com.au

Web: www.lovencare.com.au

Ph: 1300 732 599 Fax: 02 9774 4633



Please fill in this section to validate your warranty and send to: 297 Canterbury Rd Revesby NSW 2212.

Name: _____

Store Purchased: _____

Address: _____

Date Purchased: _____

Product Name/No: _____

CLEANING AND MAINTENANCE

ALL LOVE N CARE PRODUCTS HAVE ONE YEAR WARRANTY FROM THE DATE OF PURCHASE.

IT IS RECOMMENDED TO REGULARLY INSPECT AND MAINTAIN MOVEMENT OF LOCKING DEVICES AND SECURITY OF ESSENTIAL COMPONENTS.

REGULARLY CHECK ALL PARTS FOR WEAR AND TEAR.

DO NOT USE SPRAY LUBRICANTS, SIMPLY WIPE CLEAN AFTER USE.

THE SEAT LINER CAN BE CLEANED BY SPONGING WITH WARM SOAPY WATER AND A MILD DETERGENT. A MILD DISINFECTANT MAY BE USED IF DESIRED.

STUBBORN MARKS MAY BE REMOVED WITH A NON ABRASIVE CREAM CLEANER.

NEVER CLEAN WITH ABRASIVE, AMMONIA BASED, BLEACH BASED OR SPIRIT TYPE CLEANERS.

IF THE WHEELS BECOME DAMAGED OR WORN DISCONTINUE USE AND REPLACE.

FABRIC CARE

- HAND WASH ONLY
- DO NOT BLEACH
- DO NOT TUMBLE DRY
- DO NOT IRON
- DO NOT WRING
- DO NOT DRY CLEAN





Contact Us

Head Office:

Love N Care Pty Ltd.
297-299 Canterbury Rd, Revesby
NSW 2212 Australia
Contact No: 02 9774 4655
Fax: 02 9774 4633
Email: info@lovencare.com.au
Website: www.lovencare.com.au

Brisbane
7-9 Eileen Street
Underwood QLD 4119 Australia
Contact No: 07 3290 4217
Fax: 07 3209 5019

Western Australia
5 Modal Crescent
Canning Vale WA 6155 Australia
Contact No: 08 9455 4972
Fax: 08 9455 4728

let's be friends!

 <http://www.facebook.com/lovencare1>

 http://twitter.com/love_ncare



100 % AUSTRALIAN OWNED SINCE 1984

lovehncare™
lovencare.com.au